

CAD-CUT® SPORTSFILM



A CLASSIC AND DURABLE FILM, WITH A STICKY POLYESTER FILM CARRIER.

As there are so many colors available in the range, the material is perfect for multi-color designs. With a matte finish, and soft hand, and high opacity. Perfect for producing smaller designs. CAD-CUT® SportsFilm is a very lightweight polyurethane film available in a large range of colors enabling you to produce your own individual look. It provides an adhesive polyester carrier, gives excellent opacity and produces a matte finish. It is ideal for producing multi-color designs with intricate detail.



AVAILABLE IN

- 30 cm x 25 m roll*
- 50 cm x 25 m roll
- 75 cm x 25 m roll
- 100 cm x 25 m roll
- 150 cm x 25 m roll

* Minimum order quantity 5 rolls plus 25 € cutting costs

RECOMMENDED FABRICS * Must be tested before proofing!

- 100% Cotton
- 100% Polyester*
- Polyester-Cotton blends

CUTTING NOTES

Always test the cutting settings before production. The settings depend on the age of the blade used. To ensure optimum processing of the material. **Minimum line thickness of 1 mm.**

APPLICATION INSTRUCTIONS


Temperature: 130° C / 150° C
Time: 10 sec. / 5 sec.
Pressure: Medium (#4-6 with Hotronix®)
Carrier: Hot peel

MULTI-COLOR DESIGNS

Press on the background for 3 - 5 seconds - peel off the carrier cold. Repeat the process for further colors. Press for 13 - 15 seconds for the last color. Remove the carrier hot.

ACCESSORIES RECOMMENDED

- Grip Cover Sheet
- Cover Sheet - Non-Sticky
- EZ Weeder®, LED Weeder, LED Pin or Tweezers

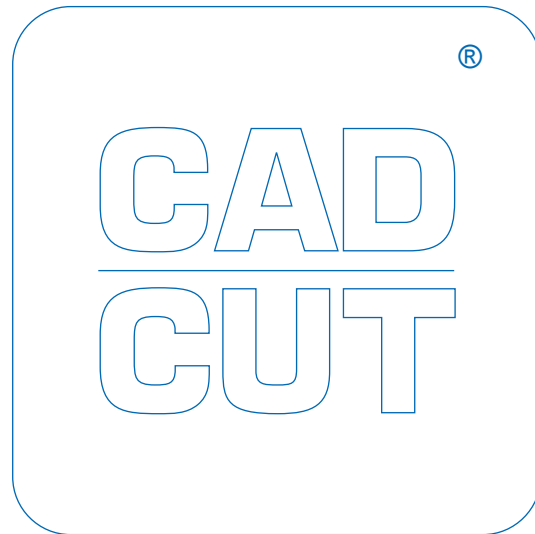


CARE INSTRUCTIONS

Washable up to 60° C. Please do not use fabric softener or bleach. Suitable for tumble drying on a gentle setting. Wash and iron inside out.

STORAGE

Store in a cool, dry environment. Avoid direct heat or sunlight.

DETAILS

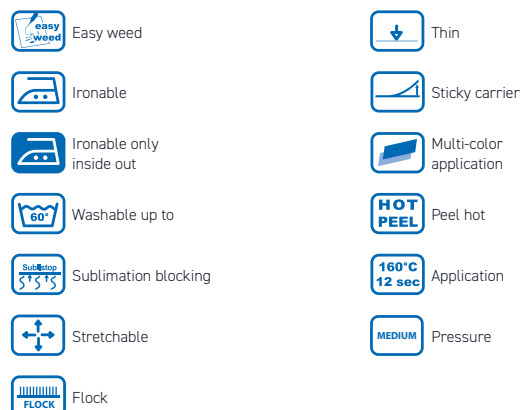

CAD-CUT® SPORTSFILM



 001 white	 004 beige ca. Pant. 4685c	 005 cream ca. Pant. 479c	 006 peach ca. Pant. 712c	 105 pastel yellow ca. Pant. 602c
 100 lemon ca. Pant. 7405c	 110 yellow ca. Pant. 012c	 104 sahara yellow ca. Pant. 7407c	 106 sunflower yellow ca. Pant. 137c	 185 light orange ca. Pant. 1495c
 180 orange ca. Pant. 021c	 182 texas orange ca. Pant. 4013c	 210 signal red ca. Pant. 185c	 200 red ca. Pant. 186c	 270 burgundy ca. Pant. 188c
 255 pastel pink ca. Pant. 2036c	 256 rose pink ca. Pant. 694c	 252 pink ca. Pant. 507c	 250 fuchsia ca. Pant. 214c	 253 berry ca. Pant. 226c
 254 vintage pink ca. Pant. 17-1605	 285 pastel purple ca. Pant. 2071c	 280 purple ca. Pant. 2096c	 321 pastel blue ca. Pant. 538c	 320 light blue ca. Pant. 298c
 330 columbia blue ca. Pant. 4150c	 340 dove blue ca. Pant. 18-4020	 300 royal blue ca. Pant. 286c	 350 navy ca. Pant. 532c	 335 deep navy ca. Pant. 2378c
 360 aqua ca. Pant. 631c	 370 pastel mint ca. Pant. 317c	 419 mint ca. Pant. 339c	 380 turquoise ca. Pant. 7717c	 420 pastel green ca. Pant. 358c
 421 apple green ca. Pant. 368c	 422 light green ca. Pant. 362c	 425 pistachio green ca. Pant. 5777c	 423 sage green ca. Pant. 7537c	 424 iceberg green ca. Pant. 443c
 400 green ca. Pant. 7727c	 410 dark green ca. Pant. 560c	 430 olive ca. Pant. 7763c	 555 medium brown ca. Pant. 2472c	 550 brown ca. Pant. 7616c
 730 grey ca. Pant. 7543c	 740 mid grey ca. Pant. 10c	 780 dark grey ca. Pant. 419c	 700 black	 815 silver ca. Pant. 877c
 115 gold ca. Pant. 871c	 215 rose gold	 101 neon yellow	 181 neon orange	 241 neon pink
 301 neon blue	 401 neon green			